



Troubleshooting Optiflow

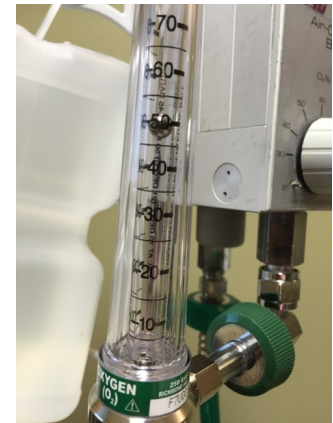

Heater Beeping

- ⇒ Too HOT: Ensure there is water present for humidification & ensure that it is actually flowing into the heater
- ⇒ Too Cool: Keep the fan from blowing on the heater, which throws off its temp measurement

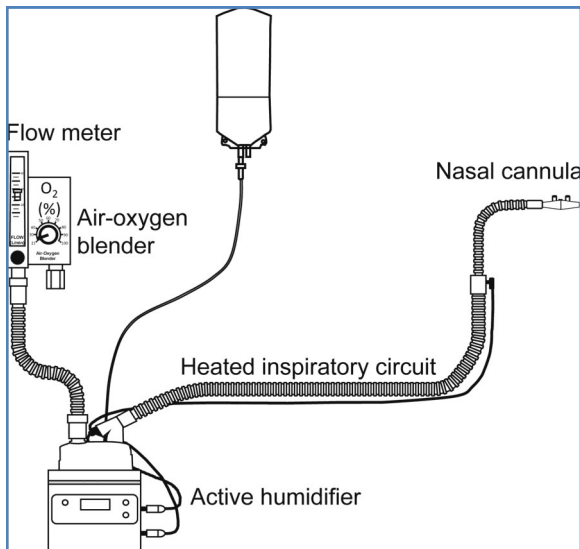

Patient Complaints of Nose Burning

- ⇒ Check heater to ensure water is present and humidifying

Patient Decompensating/ Desaturating

- ⇒ Increase FiO₂ % on the air oxygen blender & call respiratory for assistance (RRT if appropriate)

